

PINCE D'ANCRAGE ACADSS



| LEGEND | |
|--------|---------|
| 1 | Body |
| 2 | Wedges |
| 3 | Bail |
| 4 | Thimble |

The ACADSS clamps are used for the anchoring of 9mm to 19mm aerial round ADSS cables on distribution networks. They are to be installed on poles or facades where spans do not exceed 90m. These anchor clamps consist of a thermoplastic conical body, a pair of wedges and an insulated bail. All parts are captive. All plastic parts are UV-resistant.






| PN | MODEL | Ø CABL | BAIL LENGTH | MTL* | | PACKG |
|------|-----------|---------|-------------|--------|--------|----------|
| 0318 | ACADSS 10 | 9-12mm | 500mm | 600daN | 0.40kg | 30 units |
| 0319 | ACADSS 12 | 11-14mm | | | | |
| 1244 | ACADSS 14 | 13-16mm | | | | |
| 0321 | ACADSS 16 | 15-17mm | | | | |
| 0322 | ACADSS 18 | 17-19mm | | | | |

* Maximum Tension Load: for the reference cable



INSTALLATION

- On end poles
- When the line is at an angle greater than 25° (instead of a suspension device), in order to preserve the integrity of the cable over time
- If road crossing (mandatory cable stop on each pole on both sides of the road)
- In case of unbalanced adjacent spans (a span of 40m, followed by a range of 30m, for example)
- If rugged terrain (line mountainside down for example).
- In alignment, every 5 poles (if using suspension clamp on intermediate poles) or on every pole (double anchor).

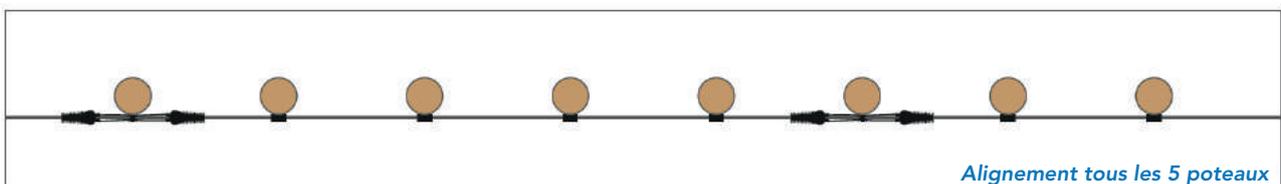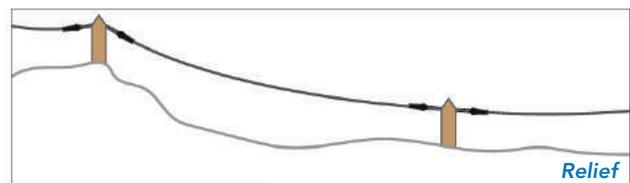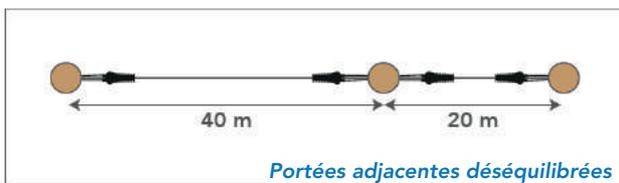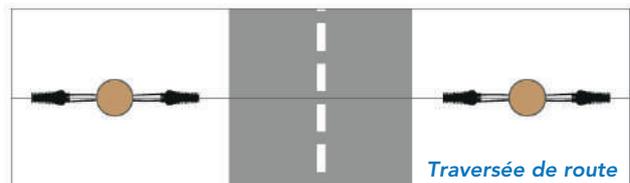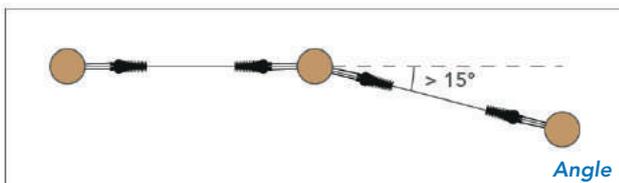

MISE EN ŒUVRE - ANCRAGE SIMPLE



Installer l'ACADSS sur la ferrure d'ancrage. Veiller à la bonne installation de la cosse.



Reculer les coins dans le corps.



Maintenir l'anse de l'ACADSS en tension. Installer le câble entre les coins à la tension voulue.



Pousser les clavettes vers l'avant tout en tirant sur le câble côté portée pour verrouiller le câble dans la pince d'ancrage.



Installation terminée

MISE EN ŒUVRE - ANCRAGE DOUBLE



Installer l'ACADSS sur la ferrure d'ancrage dans l'alignement de la pince d'ancrage précédemment installée.



Reculer les coins dans le corps.



Laisser une surlongueur de câble entre les deux pinces d'ancrage. Maintenir l'anse de l'ACADSS en tension et installer le câble entre les coins à la tension voulue.



Pousser les clavettes vers l'avant tout en tirant sur le câble côté portée pour verrouiller le câble dans la pince d'ancrage.



Installation terminée